

Firestone QuickSeam Repair Kit  
Installation Guide



## Firestone QuickSeam Repair Kit



### **Included within the kit will be:**

- 1x Firestone QuickSeam Repair Flashing
- 1x 0.5L Firestone QuickPrime Plus Primer
- 1x silicon roller
- 1x QuickScrubber handle with pad

### **Other useful tools not included:**

Scissors, tape measure and crayon

**Step 1:**


Locate the damage to the EPDM and clean the surface to remove any loose debris.



**Step 2:**

Place the Firestone QuickSeam Repair Flashing onto the centre of the damage and mark a circle around the patch allowing for an extra 25mm all the way around it.



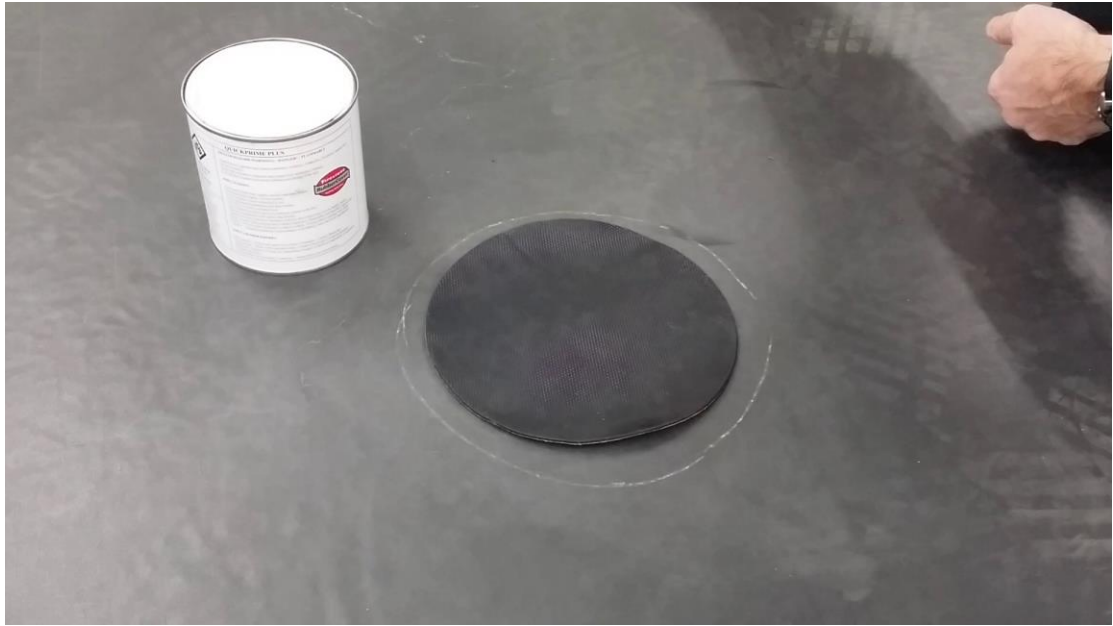

**Step 3:**

Stir the QuickPrime Plus Primer thoroughly with a mixer to prepare it for application, and apply it with the Quickscurber pad within the marked area on your EPDM.





**Step 4:**

Wait a few minutes for the Primer to flash off, then carry out a touch test to see whether it is ready for the Repair Flashing. If the Primer is stringy to the touch, then it is still too wet.

The Primer must be tacky before applying the patch, with no stringing.



**Step 5:**

Peel off the backing paper from behind the Firestone QuickSeam Repair Flashing and pinch it with two hands so that you can easily apply it to the correct area ensuring that 25mm of Primer is visible all the way around.



**Step 6:**

Apply pressure to the centre of the patch working outwards to remove air bubbles...



...then go over the top with the silicon roller provided to ensure 100% adhesion.



The finished detail.

